



Dometic DVS01 VacuFlush monitor panel Installation **SIGN Operation Manual




[Manuals](#) / [Brands](#) / [Dometic Manuals](#) / [Control Panel](#) / [VacuFlush DVS01](#) / [User manual](#) / PDF

Contents

1. 1 Notes on using the manual
2. 2 General safety instructions
3. 3 Intended use
 - 3.1. 3.1 Vacuum status monitor
 - 3.2. 3.2 "Full tank" indicator
 - 3.3. 3.3 Features
4. 4 Components (fig. 1, p. 2)
5. 5 Specifications
 - 5.1. 5.1 Materials
 - 5.2. 5.2 Electrical
 - 5.3. 5.3 Dimensions (fig. , p. 2) 2
 - 5.4. 5.4 Approvals
6. 6 Installation
7. 7 Operation
 - 7.1. 7.1 Vacuum status monitor (fig. , p. 2) 3
 - 7.2. 7.2 "Full tank" monitor (when connected to "full tank" sensor in waste holding tank)
8. 8 Warranty and product liability
 - 8.1. North America
 - 8.2. Europe
9. 9 Customer service
10. DVS01 Panel Installation Template
11. Documents / Resources
 - 11.1. Other ManualsLib Projects




VacuFlush Status

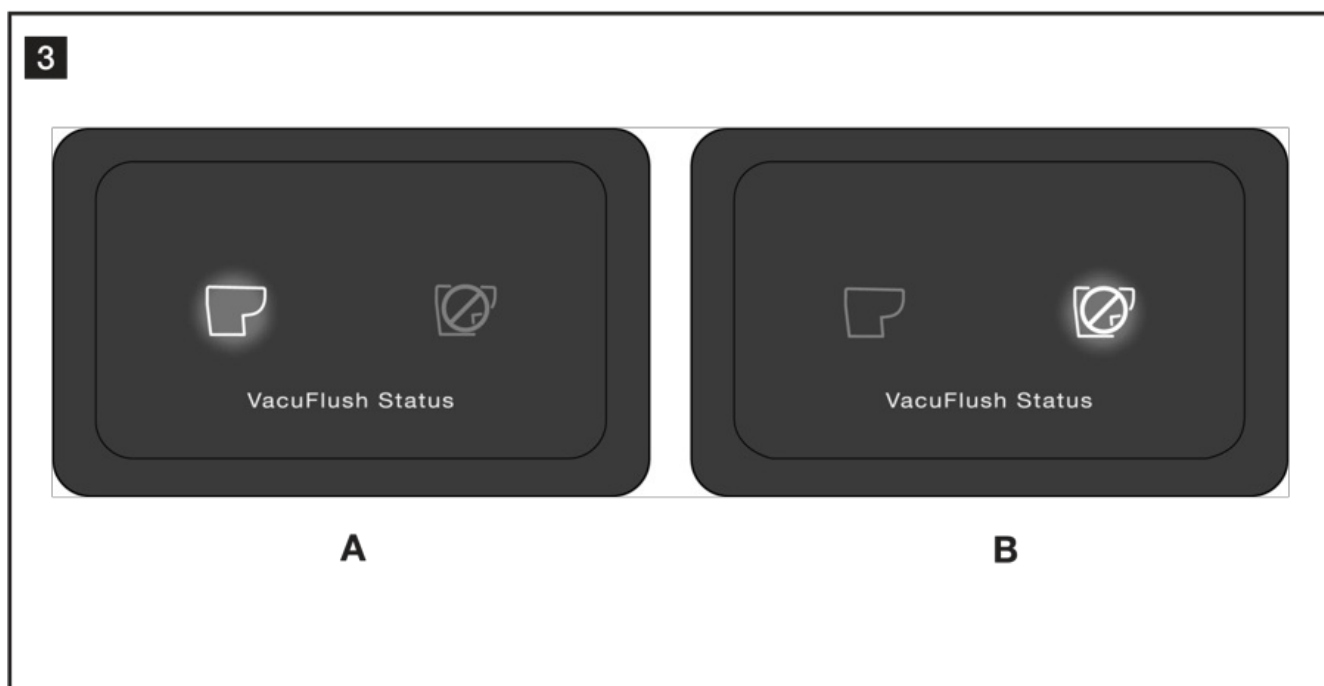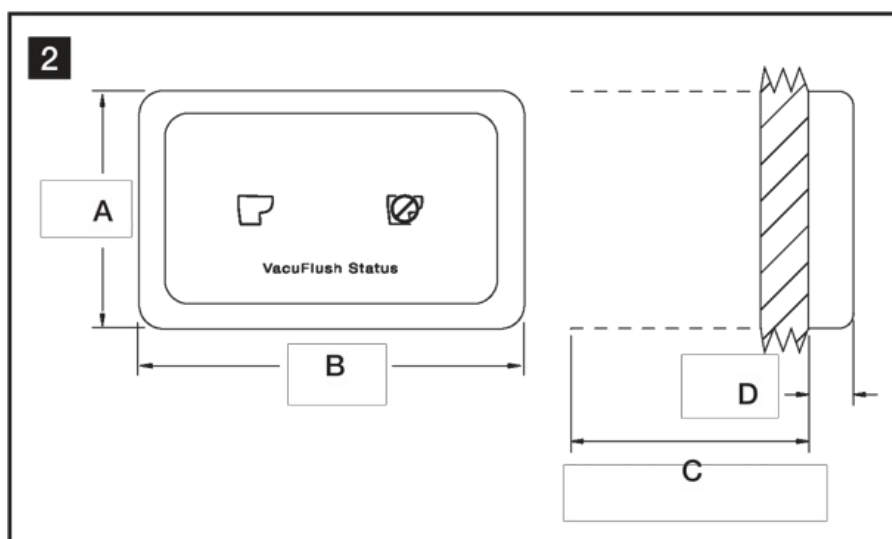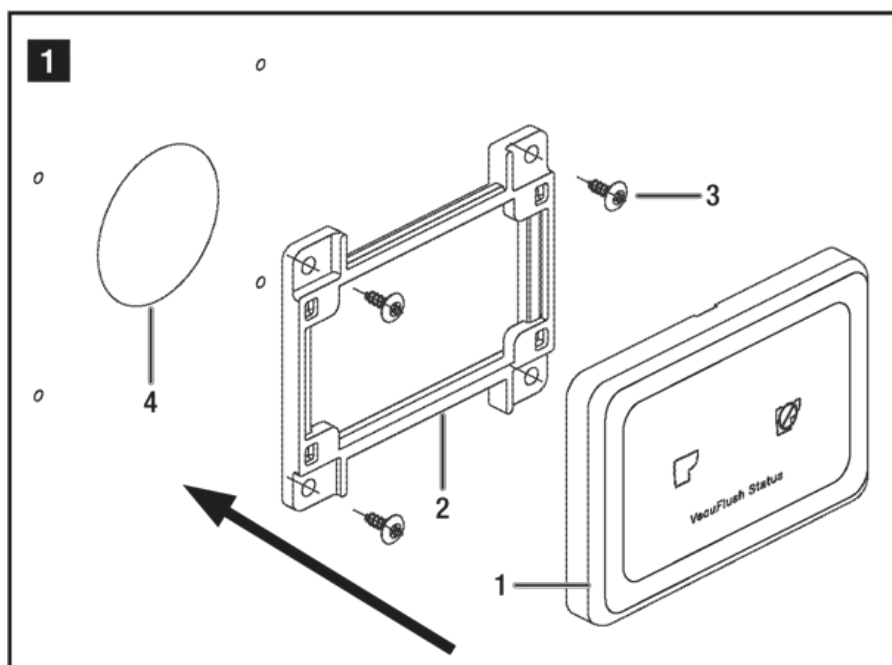


4

DVS01 panel wiring – standard marine toilet/holding tank system

DVS01 - 12 V DC

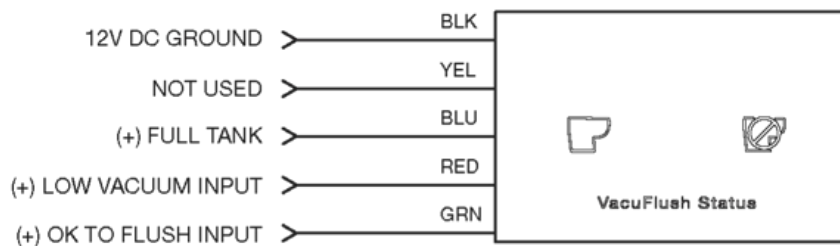


DVS01 - 24 V DC

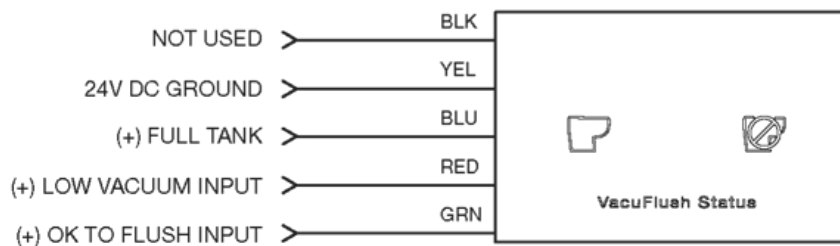


5

DVS01 panel wiring – VacuFlush system with DTM04 monitor

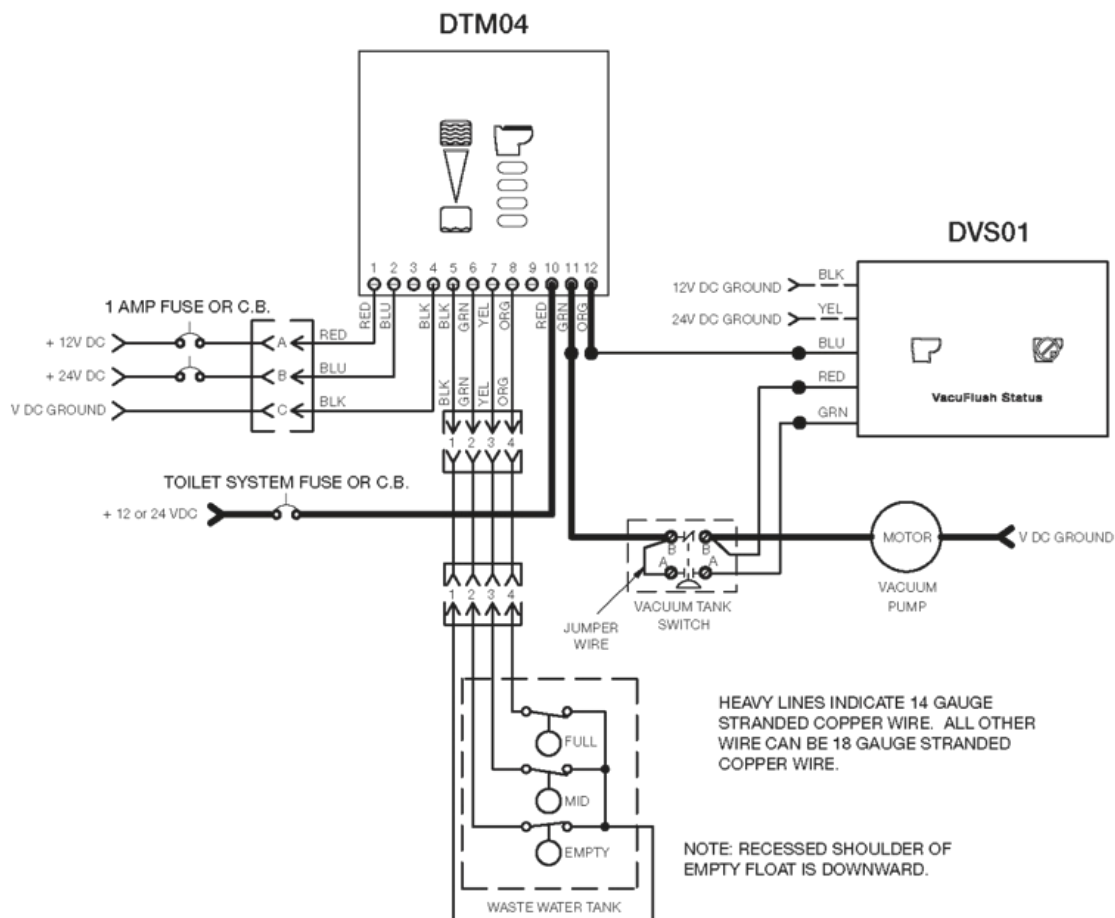

6

DVS01 panel wiring – VacuFlush system with shut-down relay

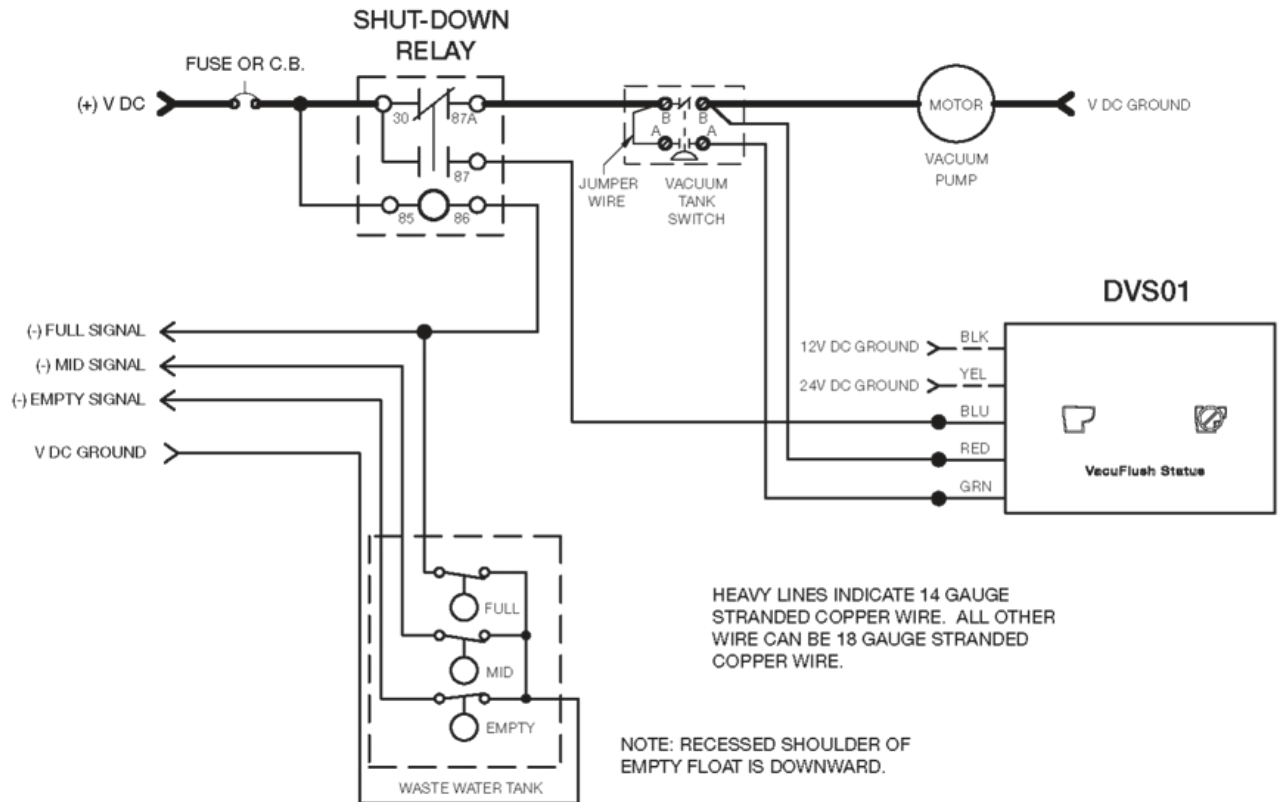

1 Notes on using the manual



Caution!

Safety Instruction: Failure to observe this instruction can cause material damage and impair the function of the device.



Note

Supplementary information for operating the device.

fig. 2 A, p. 2: This refers to an element in an illustration. In this example, item A in figure 2 on page 2.

2 General safety instructions

Read all instructions before use or installation.

The manufacturer will not be held liable for claims for damage resulting from the following:

- Faulty installation or connection

- Damage to the unit from mechanical influences, misuse or abuse
- Alterations to the unit without express written permission from the manufacturer
- Use for purposes other than those described in this manual

3 Intended use

The Domatic DVS01 panel provides two functions that make using a VacuFlush toilet system easier and more efficient. The panel indicates whether or not there is enough vacuum pressure for an effective flush, and if connected to a "full tank" sensor in the waste holding tank, an illuminated red light can also indicate that the holding tank is full.

3.1 Vacuum status monitor

For instant, powerful flushes, VacuFlush toilets should be flushed only when vacuum in the toilet system is at its optimum level. An illuminated green light on the DVS01 panel indicates when the system is ready for flushing (fig. 3 A, p. 2). After the toilet is flushed, the red light will illuminate (fig. 3 B, p. 2) – this indicates that the toilet system is in the process of building vacuum to the proper level for the next flush. When the red light shuts off and the green light glows, the toilet system is ready for the next flush.

3.2 "Full tank" indicator

When connected to a "full tank" sensor (see wiring schematics, pp. 3-4), a steady illuminated red light can indicate that the holding tank is full. (fig. 3 B, p. 2). The VacuFlush toilet should not be operated until the holding tank is emptied and the green light turns on.

3.3 Features

Continuous vacuum level monitoring. Indicates when VacuFlush toilet is ready to flush.
 Power indicator for toilet system. Indicates when toilet system power is off or loss of electrical power.
 12 or 24 V DC operation.

4 Components (fig. 1, p. 2)

Ref	Description
1	DVS01 panel cover
2	Mounting frame
3	#6 fastener

5 Specifications

5.1 Materials

Panel frame and mounting frame: ABS

Panel surface: Polycarbonate resin

5.2 Electrical

Current and wattage per indicator light

	12 V DC	24 V DC
Amps	0.019	0.019
Watts	0.23	0.46

5.3 Dimensions (fig. , p. 2) 2

Ref.	Dimension
A	2 in. / 51 mm
B	3.25 in. / 83 mm
C	2 in. / 51 mm clearance behind wall
D	0.38 in. / 10 mm

5.4 Approvals

ISO 8846; EMC Directive 2004/108/EC

6 Installation



Caution!

Do not install DVS01 panel in area with potentially flammable or explosive vapors.

1. Select panel location away from direct contact with water and oil.
2. Confirm clearance for wire connections behind wall, hull liner or bulkhead.
3. Using DVS01 panel template (fig. 7, p. 11), cut out panel access hole and drill fastener holes.
4. Remove panel cover (fig. 1, p. 2) from mounting frame (3), if necessary, by carefully pulling them apart. Install mounting frame to wall with four fasteners.
5. With electrical power off, route proper wiring to DVS01 panel location, making sure wires extend out through access hole (fig. 1, 4, p. 2). Refer to wiring diagrams (figs. 4 and 5, p. 3, fig. 6, p. 4) for appropriate toilet system. Make final wiring connections.
6. Push panel cover onto mounting frame until it locks.
7. Turn on electrical power to DVS01 panel and toilet system. Confirm normal operation of status lights.

7 Operation

7.1 Vacuum status monitor (fig. , p. 2) 3

1. When power switch is turned ON, the green light indicates that there is sufficient vacuum in the VacuFlush system to flush the toilet (A).
2. When power switch is turned ON and the red light glows, this indicates that there is NOT sufficient vacuum in the system to flush the toilet (B). Do not flush toilet, or blockage may occur in system.



Notes

If green and red light constantly cycle on and off between flushes, there is a possible vacuum leak in the system. (An idle VacuFlush system should not cycle more frequently than once every three hours.)

If green light is ON but there is no vacuum in system, a blockage has likely occurred between the toilet and vacuum tank. Open flush ball in toilet bowl and use standard toilet plunger to unblock.

After a period of time, if red light seems to remain lit longer than when toilet system was new, duckbill valves in vacuum pump may require replacement.



Caution!

If DVS01 is connected to a "full tank" sensor and holding tank is empty, a continuous red light may indicate extensive vacuum loss due to blockage, pump failure or leak. Turn off vacuum system and repair as soon as possible.

7.2 "Full tank" monitor (when connected to "full tank" sensor in waste holding tank)

When power switch is turned ON, the red light glows, and the vacuum pump is not running, this indicates that the holding tank is full and needs to be pumped out. Do not flush toilet, or blockage may occur in system.

8 Warranty and product liability

North America

Manufacturer's One-Year Limited Warranty

Dometic Corporation, Sanitation Division (Dometic) warrants to the original purchaser only that

this product, if used for personal, family or household purposes, is free from defects in material and workmanship for a period of one year from the date of purchase.

If this Dometic product is placed in commercial or business use, it will be warranted to the original purchaser only to be free of defects in material and workmanship for a period of ninety (90) days from the date of purchase.

Dometic reserves the right to replace or repair any part of this product that proves, upon inspection by Dometic, to be defective in material or workmanship. All labor and transportation costs or charges incidental to warranty service are to be borne by the purchaser-user.

EXCLUSION S

IN NO EVENT SHALL DOMETIC BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, FOR DAMAGES RESULTING FROM IMPROPER INSTALLATION, OR FOR DAMAGES CAUSED BY NEGLIGENCE, ABUSE, ALTERATION OR USE OF UNAUTHORIZED COMPONENTS. ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ARE LIMITED TO A PERIOD OF ONE YEAR FROM DATE OF PURCHASE.

IMPLIED WARRANTIES

No person is authorized to change, add to, or create any warranty or obligation other than that set forth herein. Implied warranties, including those of merchantability and fitness for a particular purpose, are limited to one (1) year from the date of purchase for products used for personal, family or household purposes, and ninety (90) days from the date of purchase for products placed in commercial or business use.

OTHER RIGHTS

Some states do not allow limitations on the duration of an implied warranty and some states do not allow exclusions or limitations regarding incidental or consequential damages; so, the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

To obtain warranty service, first contact your local dealer from whom you purchased this product or go to <http://www.dometic.com/enus/Americas/USA/Customer-Support/> for a dealer near you.

Europe:

Warranty and Customer Service

Warranty arrangements are in accordance with EC Directive 44/1999/CE and the normal conditions applicable for the country concerned. For warranty or other service, please contact our Dometic Service department listed elsewhere in this manual. Any damage due to improper use is not covered by the warranty.

The warranty does not cover any modifications to the product or the use of non-original Dometic parts; the warranty does not apply if the installation and operating instructions are not adhered to and no liability shall be entertained.

(continued on next page)

Product Liability

Product liability of Dometic Group and its subsidiary companies does not include damages which may arise from: faulty operation; improper alterations or intervention in the equipment; adverse effects from the environment which may impact the equipment itself or the direct vicinity of the equipment or persons in the area.

To obtain warranty service, first contact your local dealer from whom you purchased this product or go to <http://www.dometic.com> to locate a dealer near you.

9 Customer service

There is a strong, worldwide network to assist in servicing and maintaining your toilet system. For the Authorized Service Center near you, please call from 8:00 a.m. to 5:00 p.m. (ET) Monday through Friday.

You may also contact or have your local dealer contact the Parts Distributor nearest you for quick response to your replacement parts needs. They carry a complete inventory for the Domatic product line.

Telephone:

1800-321-9886 U.S.A. and Canada

330-439-5550 International


Fax:

330-496-3097 U.S.A. and Canada

330-439-5567 International

Web site: <http://www.Dometic.com>

DVS01 Panel Installation Template

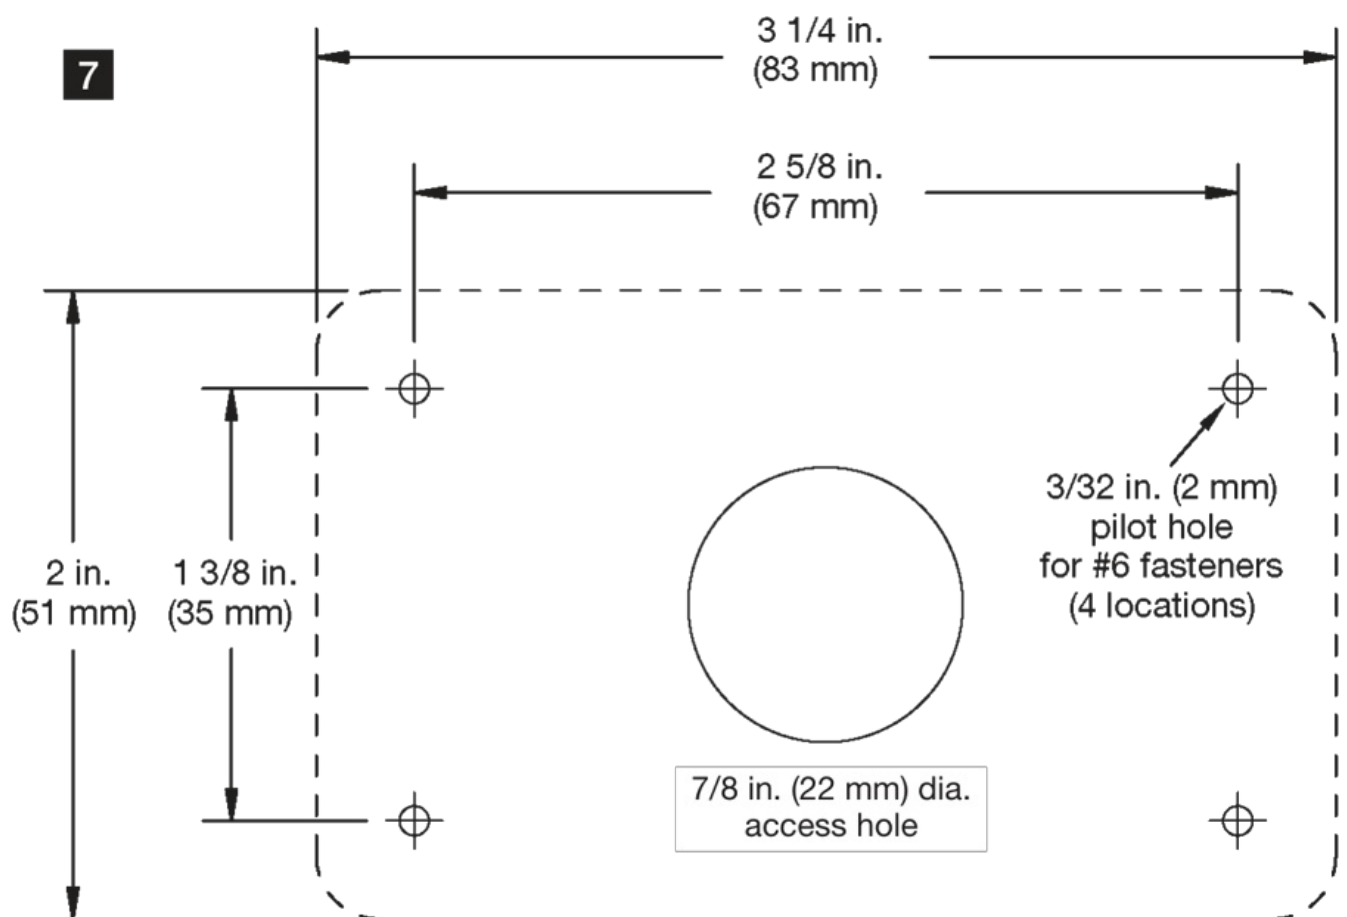

2 in. (51 mm) minimum clearance behind wall

Dometic Corporation, Sanitation Division

13128 State Rt.226,P.O.Box 38

Big Prairie, OH 44611 USA

1-800-321-9886 •Fax: 330-496-3097

www Dometic com

Documents / Resources

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ languages